



## 085800 Moto Guzzi V85TT Spray Guard Instructions


### Kit Includes:

1X	Aluminium Bracket	CFK085800
1X	Plastic Cap	C085999
1X	Aluminium Spacer Plate	CFK085999
X2	M8 x 50mm SS Cap Head Bolt	CBOL0310
X2	M8 SS Washer	CWASM80001
X2	M6 x 16mm Black Dome Head Bolt	CBOLM60001
X2	M6 Washer	CWAS0230
X2	M6 Nyloc Nut	CNUT0200

*Note: We DO NOT advise attaching any extra parts to this Spray Guard IE: number plates & indicators*

*We also advise the use of thread-locking fluid when attaching this product*

- Attach the spray guard cap to the bracket using the M6 fittings supplied (see image below).
- Remove the two small plastic caps from the mounting points in the swing-arm hub. A Stanley blade (or similar) is useful for removing for getting behind the head of the cap.
- Apply a small amount of thread-locking fluid to the M8 bolts supplied.
- Attach the Spray Guard to the mounting points using the fittings supplied (see image below).
- It is possible to make final adjustments to the position of the plastic cap by loosening off the M6 fittings, repositioning and retightening.
- Ensure all fixings are checked periodically.

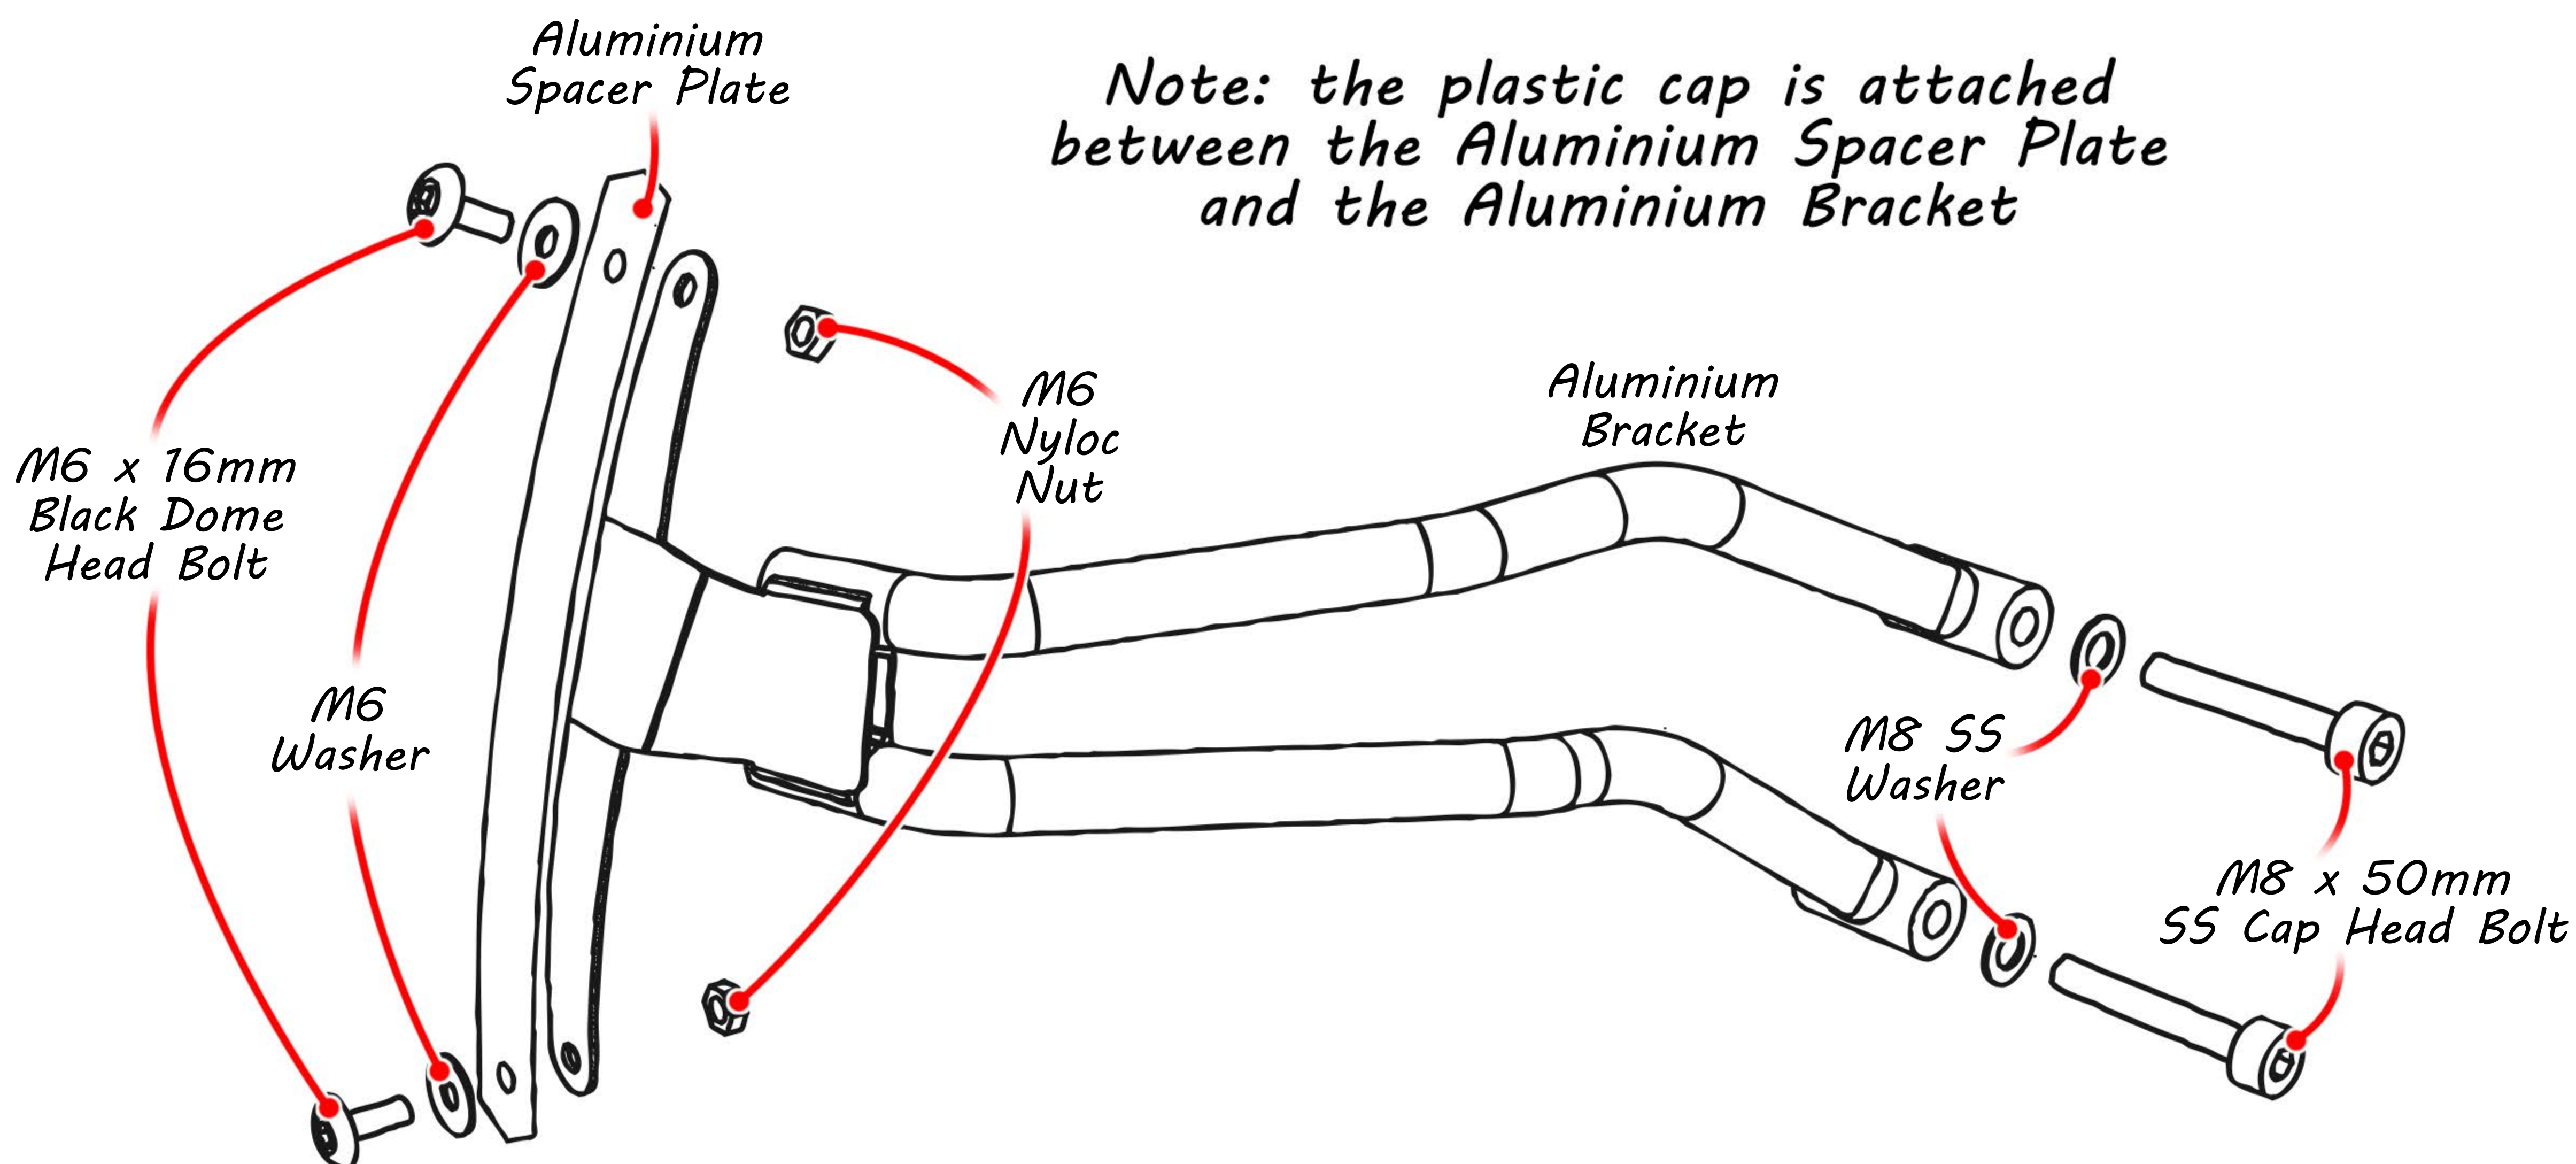

Any questions?  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

